


REMOTE CONTROL CONNECTIONS

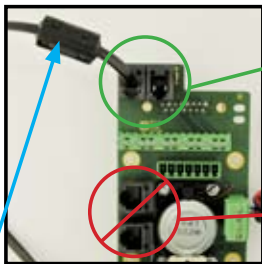

Use either
4-position
modular jack

DO NOT use
the 6-position
modular jack.



Position ferrite on
cable end nearest
the Nexus board or
Panel Mount, NOT
nearest the remote
control.